


Multimedia LCD iS2

Installation Guide

Wiring Connections

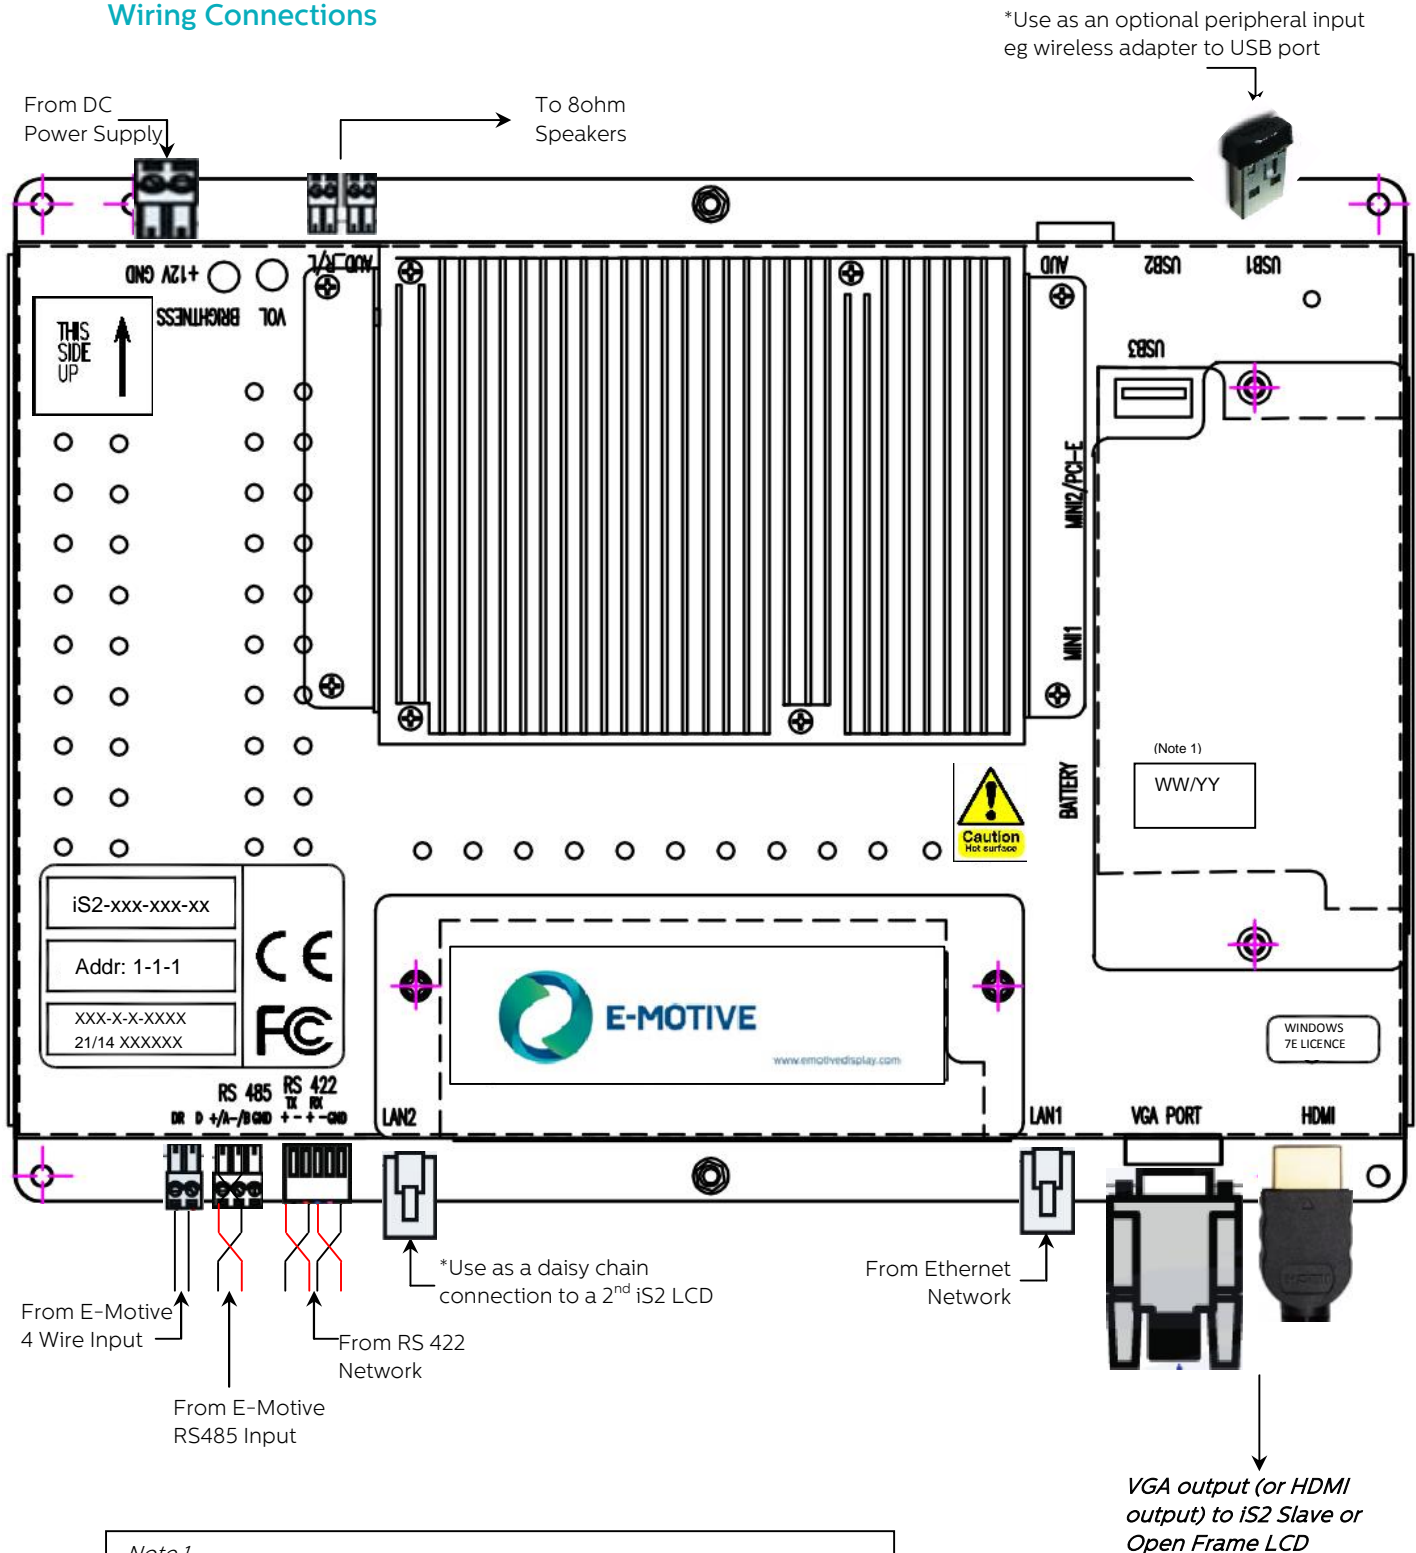


*Use as an optional peripheral input eg wireless adapter to USB port

Note 1

- Battery Compartment is labelled WW/YY based on the battery installed date. (WW – Week of the Year & YY – Year)
- Battery is recommended to be change after 3 years from installed date. To refer to Changing Battery Instruction when changing battery.


Mechanical Mounting

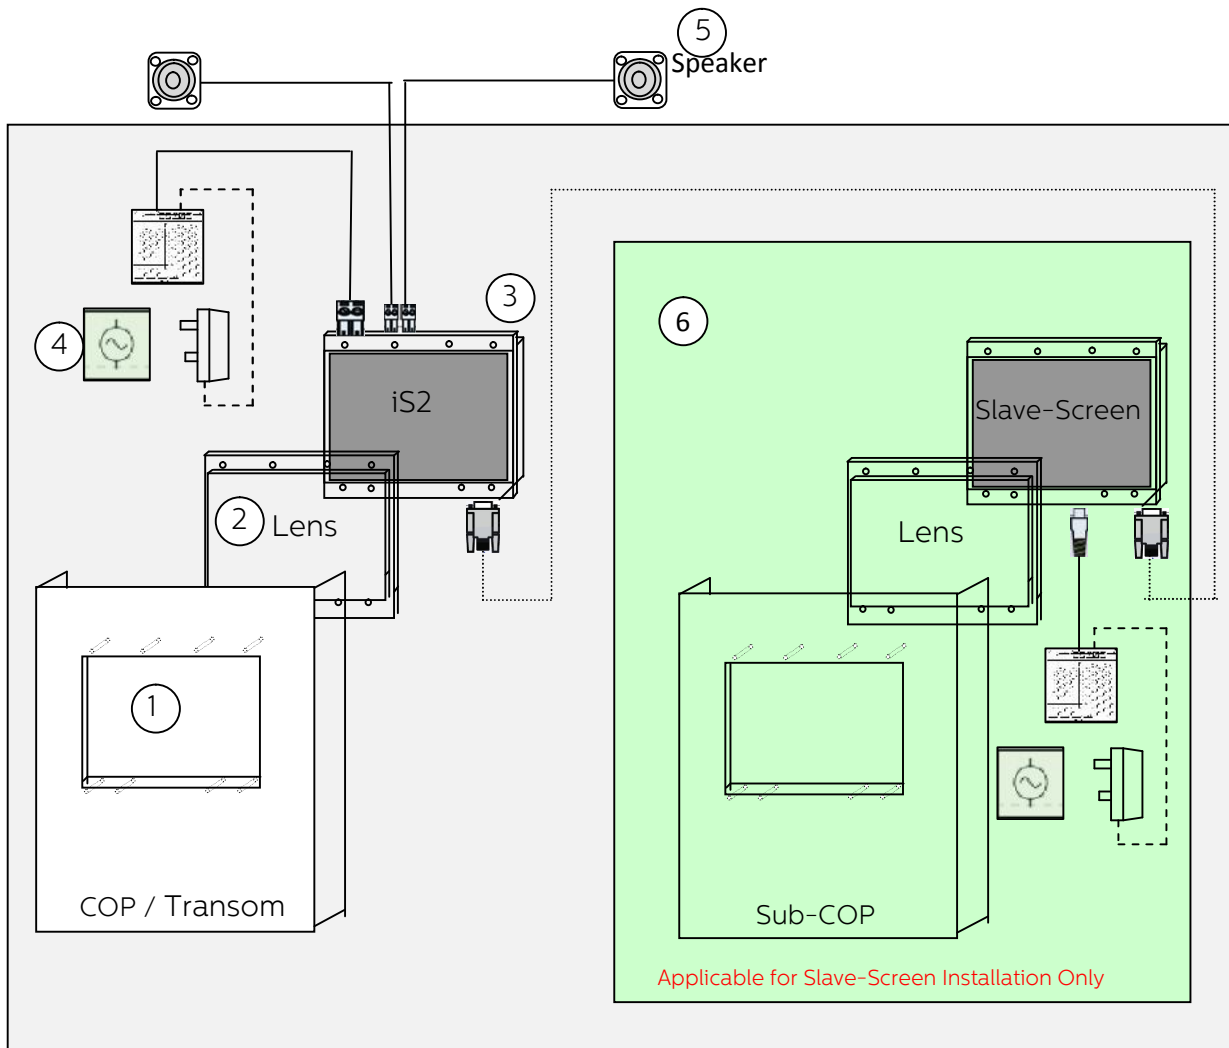

Mounting Instructions

1. To prepare the COP cut-out and mounting studs according to the mechanical drawing of the Screen / Lens used. Ensure sufficient air space around LCD unit for ventilation
2. Next, mount the lens. This item is optional and does not come with the standard order. This is however recommended for the additional protection and aesthetic look of the COP/Transom
3. Mount the iS2 LCD unit
4. Prepare 01 x Mains (110/230Vac) sockets. This is for the iS2 LCD unit
5. Mount the speakers at the Car-Top, with the speaker facing into the Car
6. If there is a Slave-Screen application, follow step 1 to 4 for the mounting and use the VGA cable provided to connect the VGA ports of the 2 screens

Caution:

- + Risk of electric shock. Never remove the casing of the unit 
- + Ensure that the Power Supply is connected properly and that the voltage is correct before turning on the System
- + Handle LCD unit with care. Do not knock and place heavy object on top surface of the LCD unit
- + Avoid direct contact with heat dissipating component eg heat sink.